


## How to make a buzzing stick to measure soil-water in dipwells

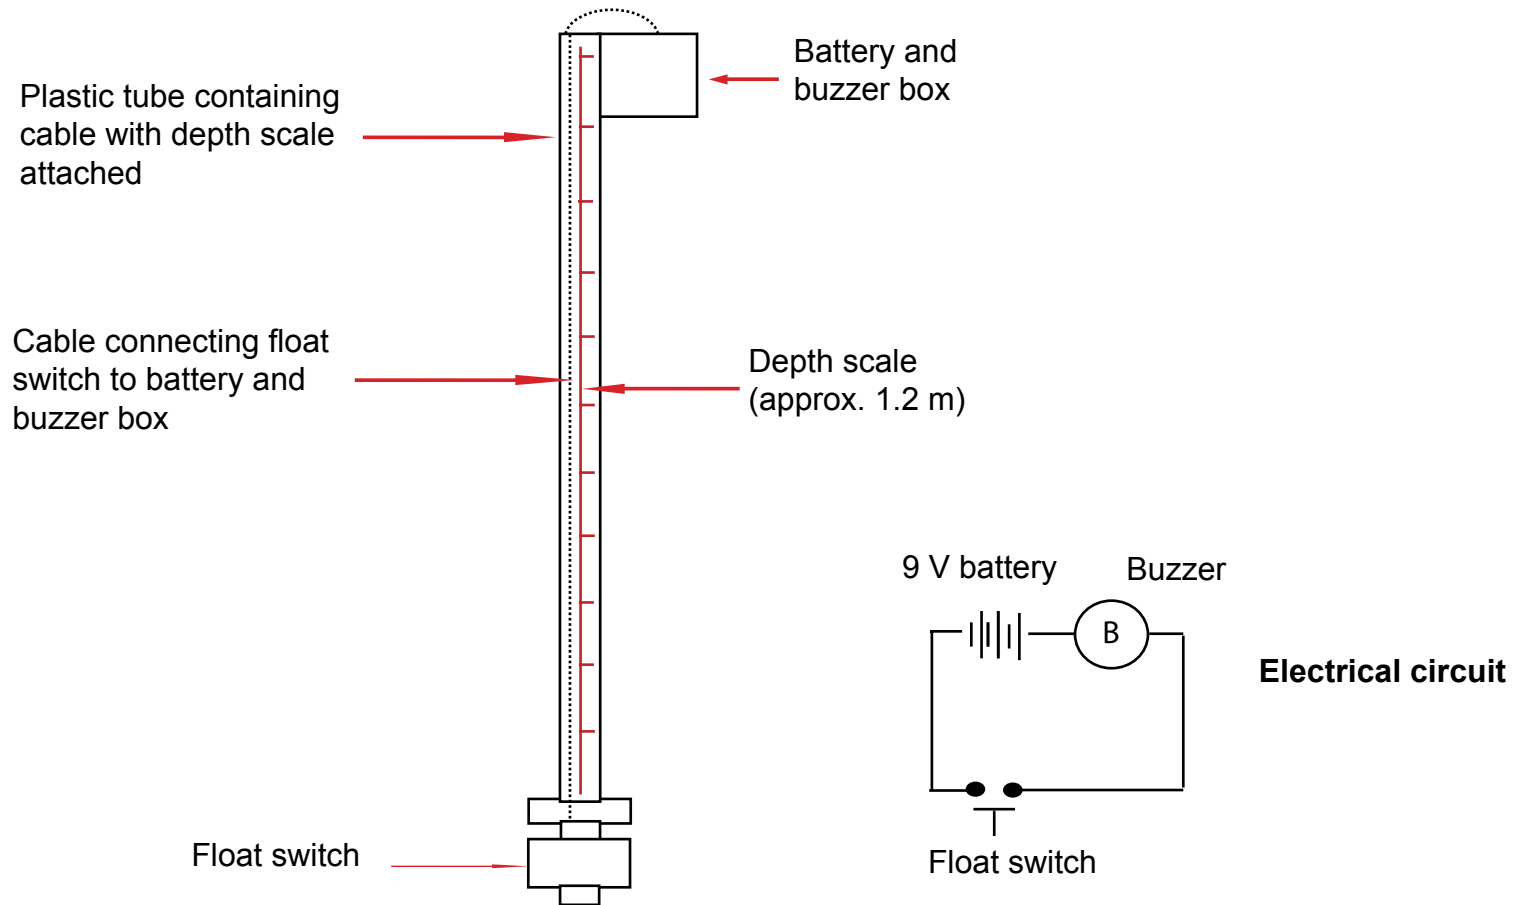

An alternative design would be to replace the plastic tube that carries the cable and holds the tape measure, with a simple tape measure and flexible cable. Attach the cable to the back of the tape measure, and attach the float switch and battery/buzzer box as described, and you have a buzzing tape measure that is easier to carry and make.